No patent restrictions in Japan

SUNRISE INDUSTRIAL WEAR

Cold Water circulation Vest

*Cools with frozen water botle or ice pack



WWW.SUNRISE-INDUSTRIAL-WEAR.COM



1.Opend the water bag lid by turning it counterclockwise



4. Conect to USB power bank




2. Place the froxen water botle or ice pack into the water bag



5. Turn on the powewr and start using the device



3. Fill in with 500 ml of water (full capacity is 550 ml)

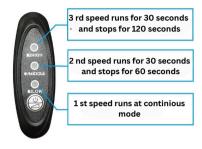




1.Directly unplug and remove the water pipe from the pump interface, conect the left A inlet pipe to the pump A water inlet end when assembling.

2. Directly unplug and remove the wter pipe from the pump interface and connect the right B outlet pipe to the pump B outlet when assembling.

3. Take out the electronic oil before washing.

4 Take out the motor pump before washing. 5. Prohibit taking out water pipe and water bag. avoide being unfamiliar with the drainage method of the waterway where the water pipe can not be installe.

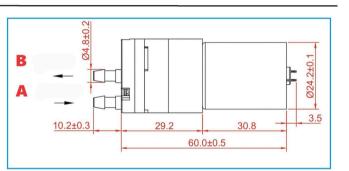



Size : Lenth 58 CM, shoulders width 40 cm , weist 90-110 cm (adjustable)

Fabric: 100% nylon, lining: 100% polyester, EVA/TPU (water bag, Silicone water pipe *all food grade).



np@sunrise-industrial-wear.com sunrise.industrial.wear@gmail.com Tel. / Whats Up: + (357) 96-18-50-74 Tel. / Whats Up: + (86) 135-39-99-95-45